


SafeAZ[®]


GATE HARDWARE

60KG HINGE SET

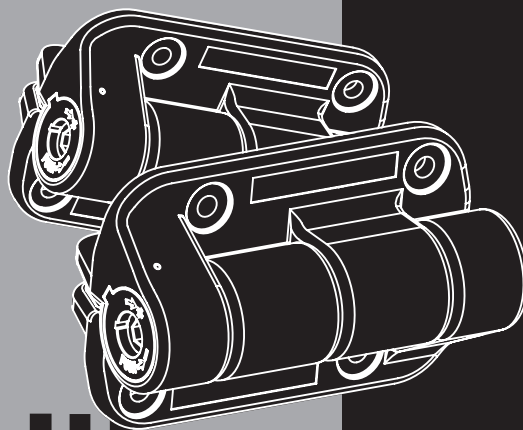

- Self Closes Gates up to 60kg
- Adjustable Tension
- Alignment Legs for Fast & Easy Install

START

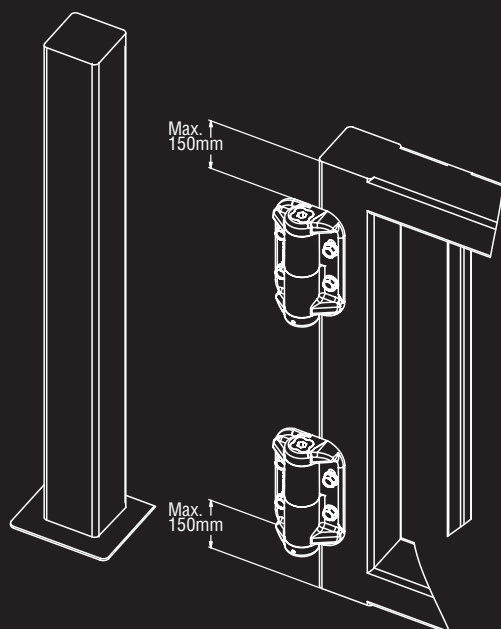

Lay the gate flat.

Position Hinges more than 100mm from top/bottom edges. Mark Hinge holes.

Mount Hinges to the Gate.

Hold the Gate/Hinges against post and mark holes then mount it.


Use all fasteners provided.

With Gate closed adjust the tension of both hinges. Using the 6mm allen key provided, rotate in ¼ increments.

Turn clockwise to increase tension. Turn it in the opposite direction to reduce tension.

Warning: Don't rotate tensioner more than two full turns.

Important: Support the gate weight while adjusting tension

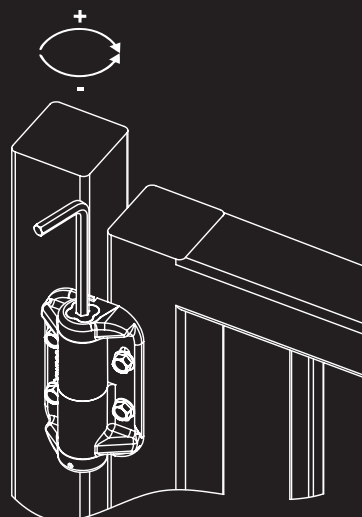

Add the Anti-Step cap to the bottom hinge. Note locator notch on both parts.

Nip it up with a screwdriver.

Slightly open gate 25mm to check the gate closes.

FINISH