

SafeAZ[®]

GATE HARDWARE

DROP BOLT LOCKABLE




- 450mm
- 300 Series Stainless Steel
- Hi-Impact Polymer

DPLDROP

START

Gate Frame must be at least 40mm wide.

Make sure bracket with the lock is on top.

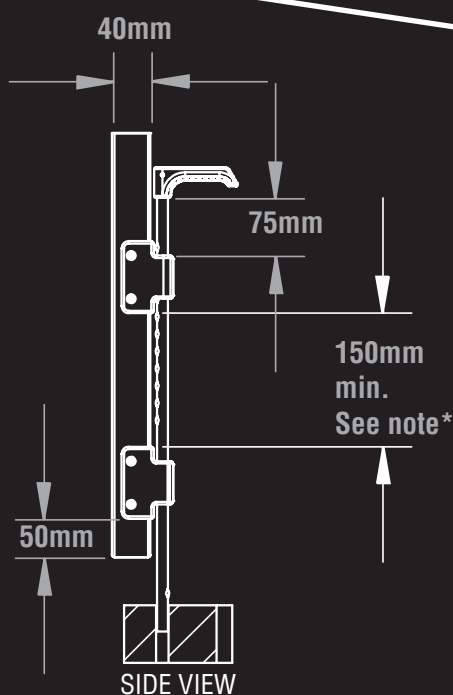

Mount Bottom Bracket 50mm from bottom of gate.

*A min. 150mm gap between Brackets is best. If gap must be less, the Brackets must be mounted with Locking Tabs resting on top of Brackets.


TOP Bracket
Lower rod into locked position. Position Top Bracket so a Locking Tab rests on the Top Bracket. 75mm of the rod should be seen between the handle and Top Bracket.

OPERATION

The Bolt should move up/down only when handle is pointing straight out.

TO LOCK, turn handle straight out from gate, lower Bolt into the hole and turn handle flat against gate. Turn key 1/2 turn to lock, pull key straight out.

TO UNLOCK, turn key counter-clockwise 1/2 turn, pull key straight out.

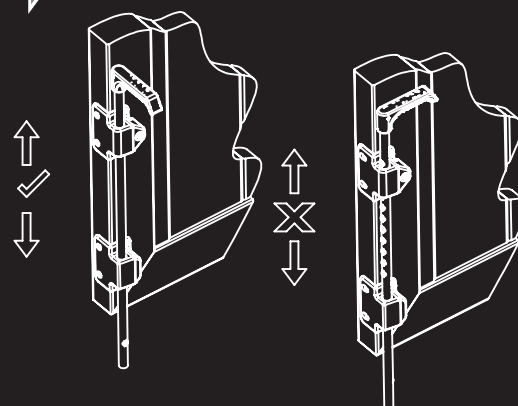

FINISH

SafeAZ
GATE HARDWARE

www.trioaustralia.com.au

Maintenance

- Inspect Latch annually or more frequently if the gate is used often.
- Only lubricate with powdered graphite lubricant. No petroleum-based lubricants, oils etc.

2021