


# Interbath®


## Rio Deluxe™ Handshower





1. Apply teflon tape

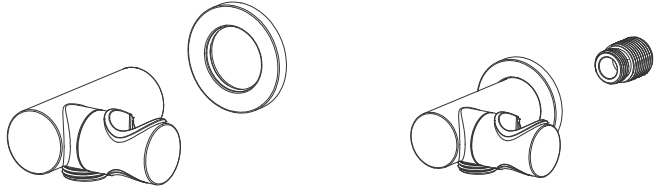

2. Push on cover plate and screw on wall bracket

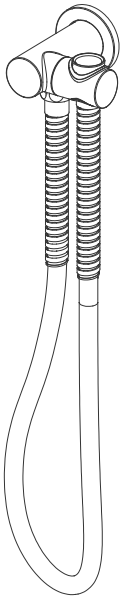

3. Screw on the hose

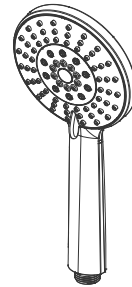

4. Screw on the handshower